



[REMOTE VIEW FOR IPHONE FOR LTD77XX, LTD451 & LTD851]

Instruction Manual for setting up the iPhone to perform Remote View

Prerequisite:

1. iPhone with Firmware 3.0
2. 3G or WiFi Enabled

Procedure:

1. Navigate on the iPhone to find **App Store** (Fig. 1), you will be redirected to the App Store Page (Fig. 2).

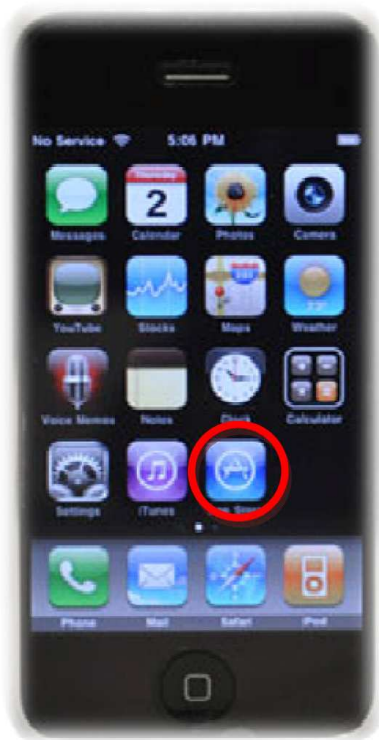


Fig. 1

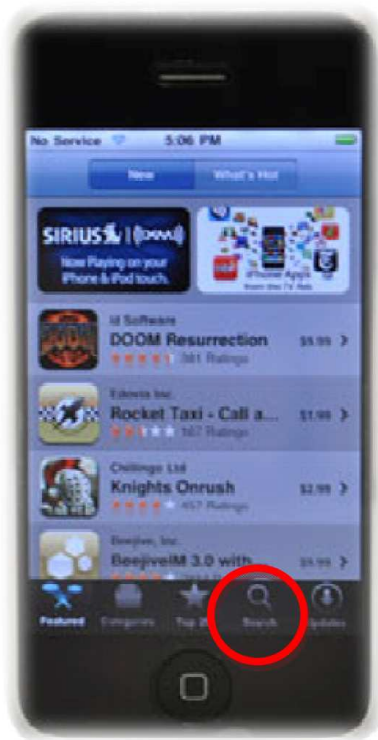


Fig. 2

2. Touch the Search Icon shown in Fig. 2 and Search for an application called "Super Cam"(See Fig. 3). Touch the "Aplayer" and the App Info appears (Fig. 4).

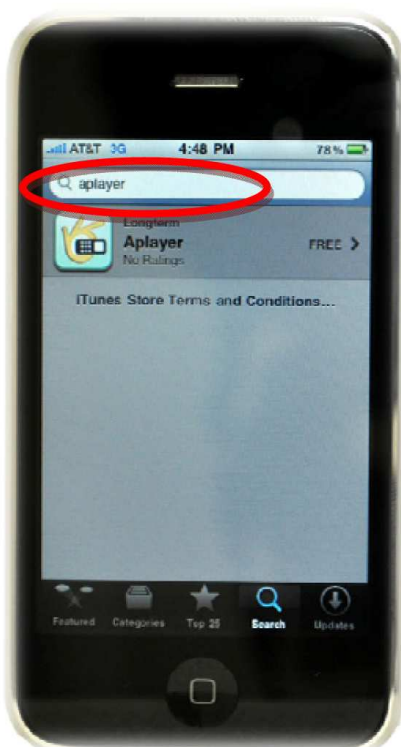


Fig. 3

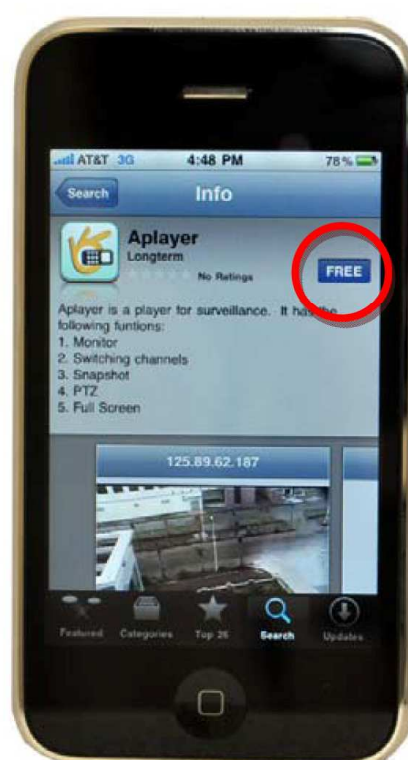


Fig. 4

3. Touch on the “Free” button circled in Fig. 4. The button will turn into “Install”(Fig. 5)
You will need to type in your iTunes Password for Verification Purpose. Touch “OK” after you’re done.

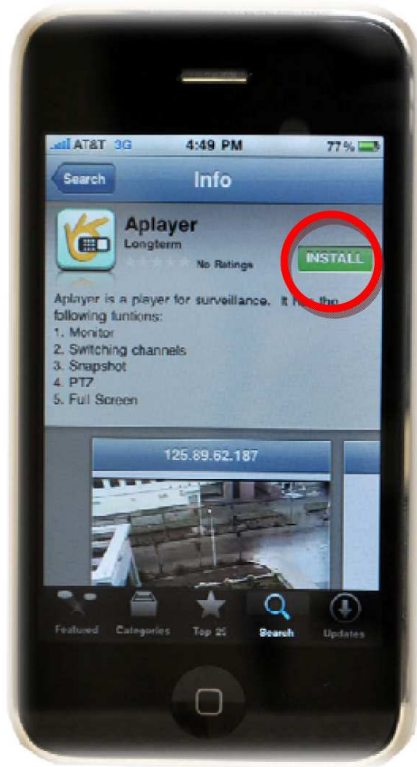


Fig. 5



Fig. 6

4. After you touch “Install” the Icon will appear and indicate that it is installing (Fig. 7).
After installation is completed, the **APlayer** will appear below the Icon.



Fig. 7



Fig. 8

5. Touch the “APlayer” Icon. The Menu will appear (Fig. 9). Select the gear icon “Setting” and the Login Settings Page appear (Fig. 10).



Fig. 9

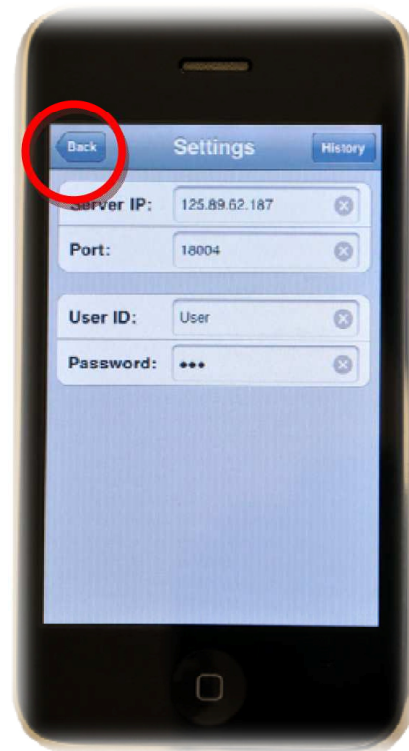


Fig. 10

6. As illustrated in Fig. 10, type in the Server Host Name or IP address and Port Number in the Server Box. Then Type in the Username and Password of the account assigned by the DVR administrator. After the information is typed in, Press the “Back” button. The APlayer Interface appears (Fig. 11).
7. Touch “Play” to view DVR Cameras live. Enjoy.



Fig. 11



Fig. 12